

## EML-100

### SPECIAL NOTE ON THE USE OF THE MARKER-MATE® MARKER LOCATOR WITH STANDARD WATER (BLUE) AND POWER (RED) MARKERS

To use the EML100 Marker-Mate locator with standard Water and Power markers it is necessary to switch the unit to Standard Mode from Euro Mode. The EML100 is shipped in Euro Mode to comply with the radio regulations of some European countries. This normally needs to be done only once and is accomplished as follows:

With the unit powered up: Whilst you press and hold the down arrow ▼ and **Exit** keys together, press the up arrow ▲ key.

The display will show the new mode, which should be **STANDARD MODE**, then power off to “save” the newly selected mode. Repeat to switch back to **EURO MODE** if needed. When you power on, the currently selected mode should be shown for a couple of seconds.

Why did I need to do this?

Certain European countries have restricted the use of radio frequencies above 135 kHz such as those assigned to the Water and Power markers. The EML100 is shipped with Water and Power disabled, though they are easily enabled again for use outside those parts of Europe where restricted.

#### Further Help

For further help please contact Tempo’s customer service team or your local sales manager:

Tempo Communications, Inc.  
1390 Aspen Way, Vista CA, 92081

#### Customer Service & Support

[Support@tempocom.com](mailto:Support@tempocom.com)  
☎: [800-642-2155](tel:800-642-2155), Option 1